



GUARDABARROS TRASERO ADAPTABLE A - REAR MUDGUARD ADAPTABLE TO - HINTERRADABDECKUNG FÜR BMW R NINE T SCRAMBLER

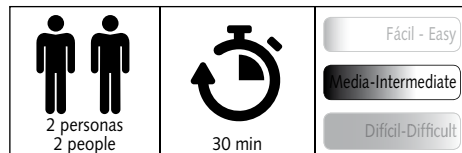

Ref.: 9464 J
(Color negro/Black colour)





Ref.: 9464 C
(Color carbono/Carbon look)

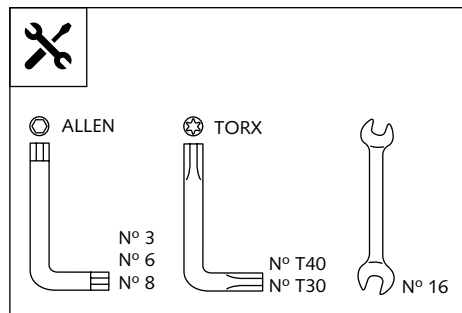

ID	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF.
1		Guardabarros	Mudguard	1	9464J/CM3
2		Soporte	Support	1	10324N
3		Silentblock	Silentblock	3	SILENBGONE-064
4		Tornillo Allen M5x11 ISO 7380	M5x11 ISO 7380 Allen screw	3	TORNI-AI---520
5		Tuerca M10 autoblocante	M10 locknut	1	TUEA-D985.8-M10
6		Tornillo Allen M10x75 DIN 912 12.9	M10x75 DIN 912 12.9 Allen screw	1	TORNI-D912--548
7		Tornillo Allen M8x45 DIN 912 12.9	M8x45 DIN 912 12.9 Allen screw	1	TORNI-D912--622
8		Casquillo de fricción IGUS Ø int.15 x Ø ext.17x15	Arrowhead friction IGUS Ø inner 15 x Ø outer 17x15	1	COJIN-P-WSM-517
9		Casquillo con valona Ø int.10,5 x Ø ext.15x17,6	Bush with flange Ø inner10,5 x Ø outer15x17,6	1	CASQUI-M----504
10		Casquillo con valona M5	M5 bush with flange	3	CASQUI-----517
11		Arandela glower M8	M8 glower washer	1	ARAND-G8----505
12		Arandela glower DIN 127 M5	DIN 127 M5 glower washer	3	ARAND-G5----506
13		Casquillo Ø int.8,5 x Ø ext.22x5mm	Bush Ø inner8,5 x Ø outer22x5	1	CASQUI-M----621
14		Tapón M5 ISO 7380	M5 ISO 7380 screw cap	3	TAPON_____85

GUARDABARROS TRASERO ADAPTABLE A - REAR MUDGUARD ADAPTABLE TO -
 HINTERRADABDECKUNG FÜR
BMW R NINE T SCRAMBLER

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

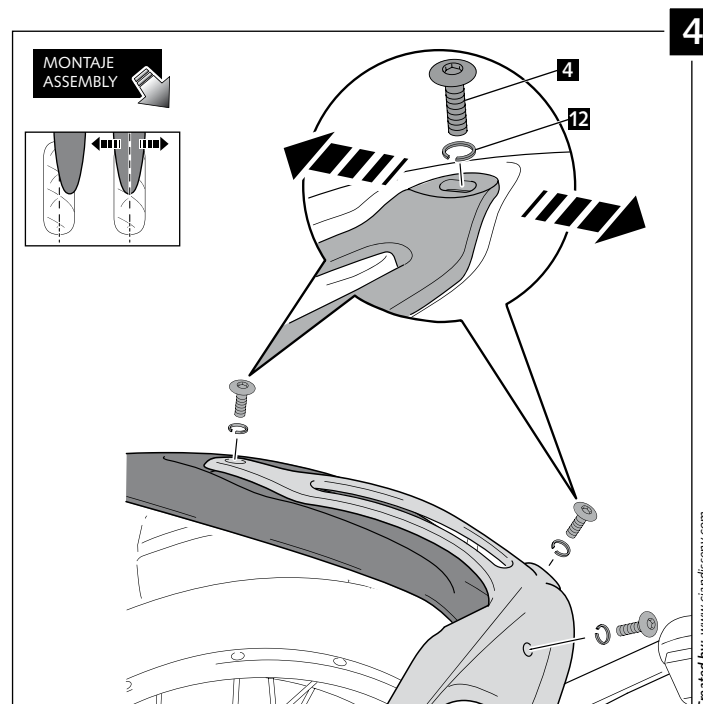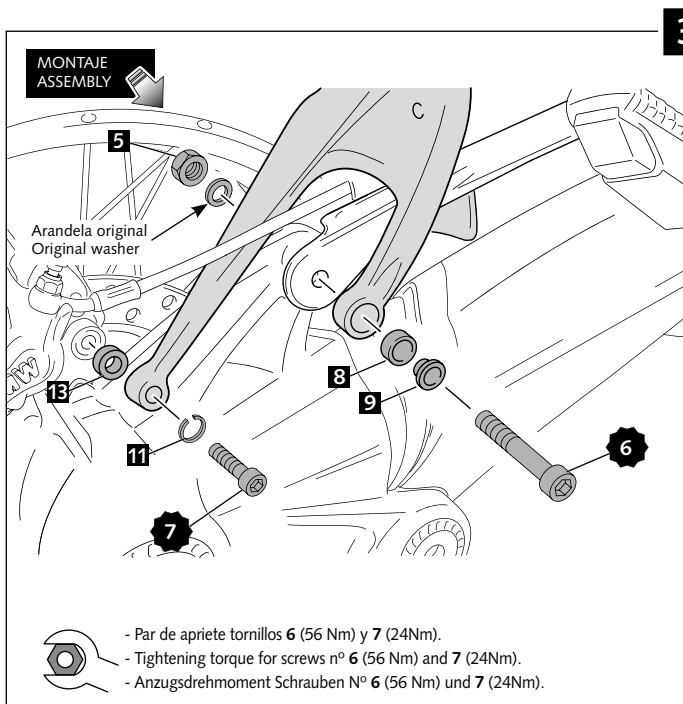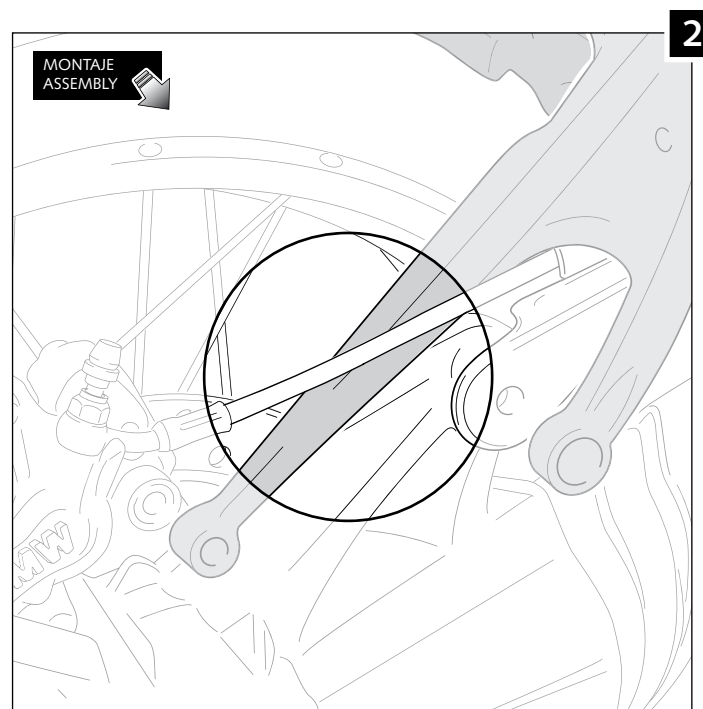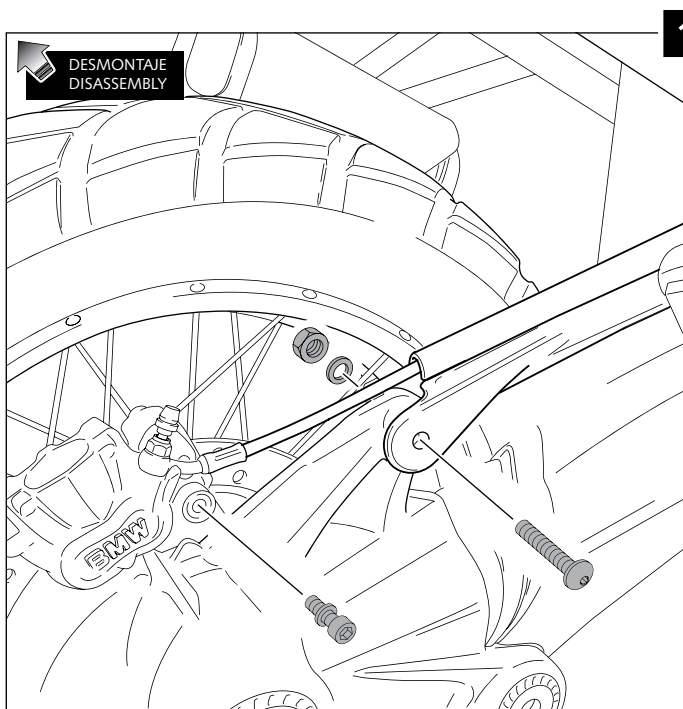

GUARDABARROS TRASERO ADAPTABLE A - REAR MUDGUARD ADAPTABLE TO -
HINTERRADABDECKUNG FÜR
BMW R NINE T SCRAMBLER

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

